

Concrete Column Skip

Product information



With a range of sizes available, Concrete Column Skips are used for pouring concrete, especially in formwork or columns where access could prove to be difficult.

WLL ton	Capacity ltr	Weight kg
2.4	1,000	380
3.6	1,500	570